


Q510 Vs Q510M FHR


Large Head as additional cost, small head as standard

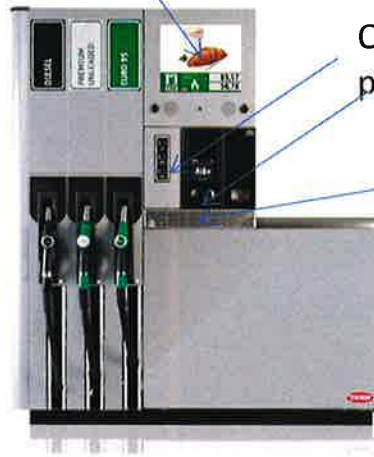

Off Centre DIT panels

Hex hole Vapour Barrier

Large Head as standard

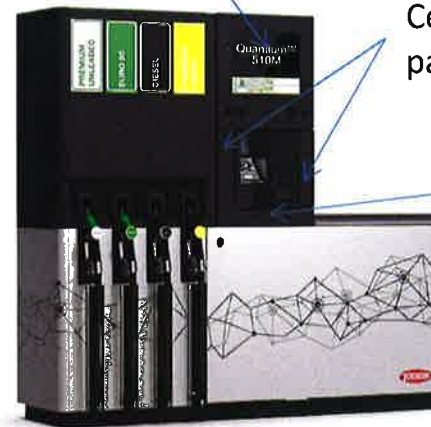

Centralised DIT panels

No Hex holes

Q500T1 AdB Vs Q510M AdB

